

# Quick Start Guide

1. Load the fully charged AA batteries. 8 is recommended, but the camera will work with 4.
2. Insert the SD card (From 8MB to 8GB).
3. Power Switch : Switch the camera to the “TEST” position to enter custom settings via the operation panel. Place the camera at the desired location and switch the camera to the “ON” position to capture photos/videos.

## Key note:

“MENU”: to enter into main menu.

“▲”“▼”“◀”“▶””: for parameter settings as described in the user’s manual.

“OK”: to save parameter settings and play videos.

“▶”: to exchange between playback mode and preview mode.

“DEL”: to delete an image.

“📷”: to capture a photo or record a video manually.

## Customer Settings

Press MENU to manually customize the camera settings. Use the display on the screen or external TV monitor. For detailed operations please read the user’s manual.

## Manual Capturing

Press 📷 to manually capture photos or record videos. Press again 📷 to stop the manual capturing of a video.

## View Images or Videos

There are two ways to view the captured images or videos:

LCD screen on the control

TV monitor which connect the camera with a TV cable

Press ▶ to view images or videos. The latest image or video will be shown in the LCD screen on the control or TV monitor. Press “▲” or “▼” to view the previous or next image/video.

## Delete Images or Videos

Press “DEL” to delete images or videos. Note: the ”DEL” button just works in the Playback state. So if it’s in Preview state, you should press ▶ to enter into Playback state.

## Mounting the Camera

You can use belt or bottom screw to mount the camera. To get the optimal picture quality, the recommended distances is up to 15 feet from the camera to the target monitoring area, and recommend height from the ground is 3-6 feet. Please adjust the viewing angel properly before powering on the camera.